



PROGRAMMABLE THERMOSTAT

CH180-230V


HOW TO IDENTIFY THE CORRECT INSTRUCTION MANUAL

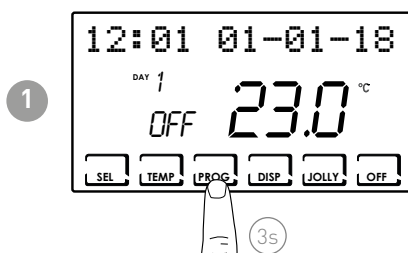

To identify the correct instruction manual for your product, follow the procedure to enter the advanced program:

Step 1: Press and hold for 3 sec. the PROG button 

Step 2: Scroll the menu with the arrows ◀ or ▶ and check the device version:

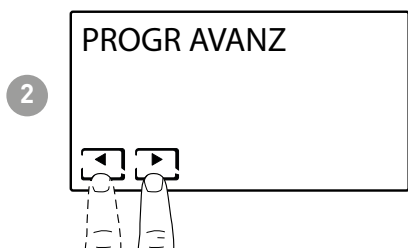

CH180 Vxx refer to the manual Code 5679800B
 CH180R/R2 Vxx refer to the manual Code 5680031


Download the instructions from our website www.fantiniCosmi.it



Manual Code 5679800B



Manual Code 5680031

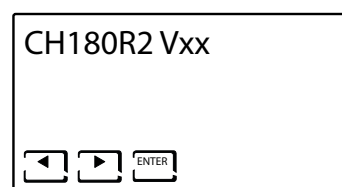

Manual Code 5680031